




# ADVANCE


PRODUCTS & SYSTEMS, LLC

P.O. Box 60399  
Lafayette, Louisiana 70596-0399  
Toll Free: (800) 315-6009  
Phone: (337) 233-6116  
Fax: (337) 232-3860  
Email: sales@apsonline.com  
www.apsonline.com  
ISO 9001 Certified

## BRIDGED KLEERBAND INSTALLATION INSTRUCTIONS

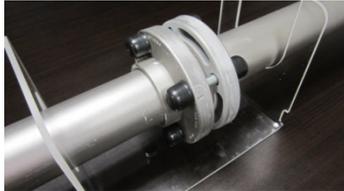

- First, clean flange of any dirt, debris, or obstructions.

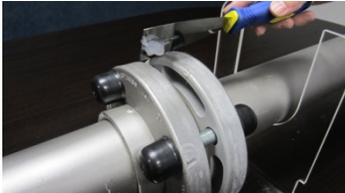

- For a quicker fill, apply grease into gap between flanges before band installation. Use only Kleergel grease or approved equal.



- Place band around flange and secure both ends of band inside PVC Bridge.



- With the band in place make sure the grease insert is accessible and vent plug is on the top half of the flange.



- Finally, tighten the SS worm gear. For multiple worm gears tighten evenly around Kleerband.


Final Torque 5 - 7 ft.-lbs.



- Remove the vent plug and pump the Kleergel into the grease zerks starting at zerks farthest from plug. Fill until grease comes out of plug.

- Reinstall plug and continue pumping until all air is removed (Some grease escape is normal).

## INSTRUCCIONES DE INTALACIONE PARA BANDAS KLEERBAND CON PUENTE

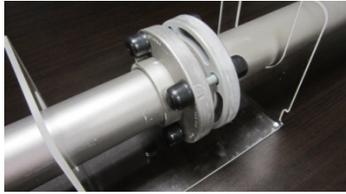

- Primeramente, limpie la brida para remover cualquier suciedad, escombros u obstrucciones.



- Para un relleno más rápido, aplique grasa en medio de las bridas antes de instalar la banda. Utilice solamente la grasa Kleergel o un producto igual que este aprobado.



- Coloque la banda alrededor de las bridas y asegúrese que ambos extremos de la banda estén dentro del puente de PVC.



- Con la banda colocada en su lugar, asegúrese que el orificio de engrase esté accesible y que el tapón respiradero esté en la parte superior de las bridas.



- Finalmente, apriete el engrane gusano de acero inoxidable. Para engranajes gusano múltiples apriete uniformemente alrededor de la Kleeerband.

Torsion final 5 - 7 ft.-lbs.



- Remueva el tapón respiradero y bombee la grasa Kleergel dentro de los orificios engrasadores, comenzando por el orificio engrasador que está mas lejano del tapón respiradero. Rellene hasta que la grasa salga por el tapón respiradero.
- Reinstale el tapón y continúe bombeando hasta que todo el aire sea removido (cierto escape de grasa es normal).